


# How To Assemble a 4 Foot Christmas Wreath

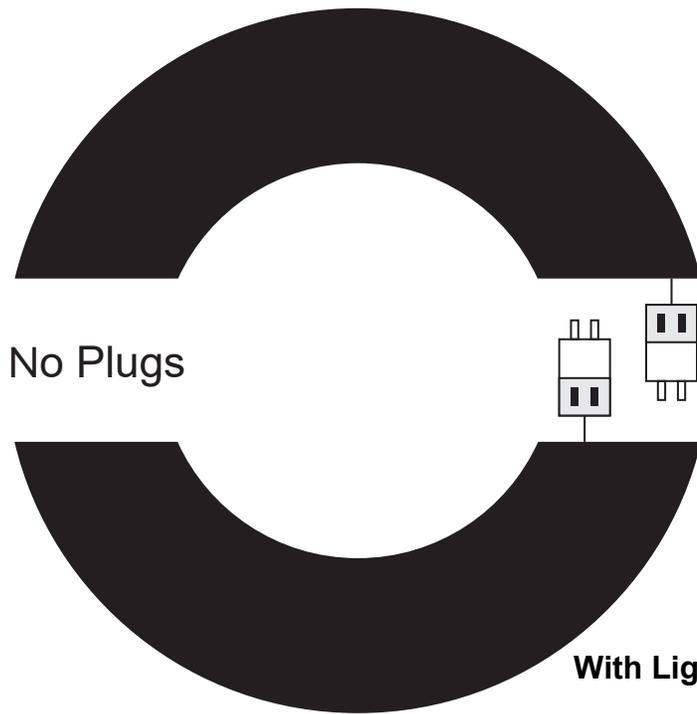

**Specifications**  
**4 Foot Christmas Wreath**  
480 Tips  
2 Piece Construction  
Outer Wire Frame Dimensions: 32"  
Inner Wire Frame Dimensions: 24"  
Outer Tip (branch) Extension: 8" per side  
Outer Frame + Tip Extension: 48"

1. Arrange frame side up (pine side down) on a flat surface.
2. Connect the two halves with nuts and bolts provided.
3. Where the wreath halves connect, plug the two light strands together.
4. Plug this group (two piggy-backed plugs) into your extension cord.
5. If your wreath does not light, inspect all internal and external plugs to ensure a sound connection.

**Optional Bow:** If using a lighted bow, plug into the back of the piggy-backed plugs and securely attach to the wreath frame using the red twist tie provided.


6. Fluff and shape the pines to bring out the fullness and beauty of your wreath.

## Without Lights:

1. Arrange on a flat surface.
2. Connect the two halves with nuts and bolts provided.

**Optional Bow:** If using a large red bow, securely attach to the wreath frame using the red twist tie provided.

3. Fluff and shape the pines to bring out the fullness and beauty of your wreath.

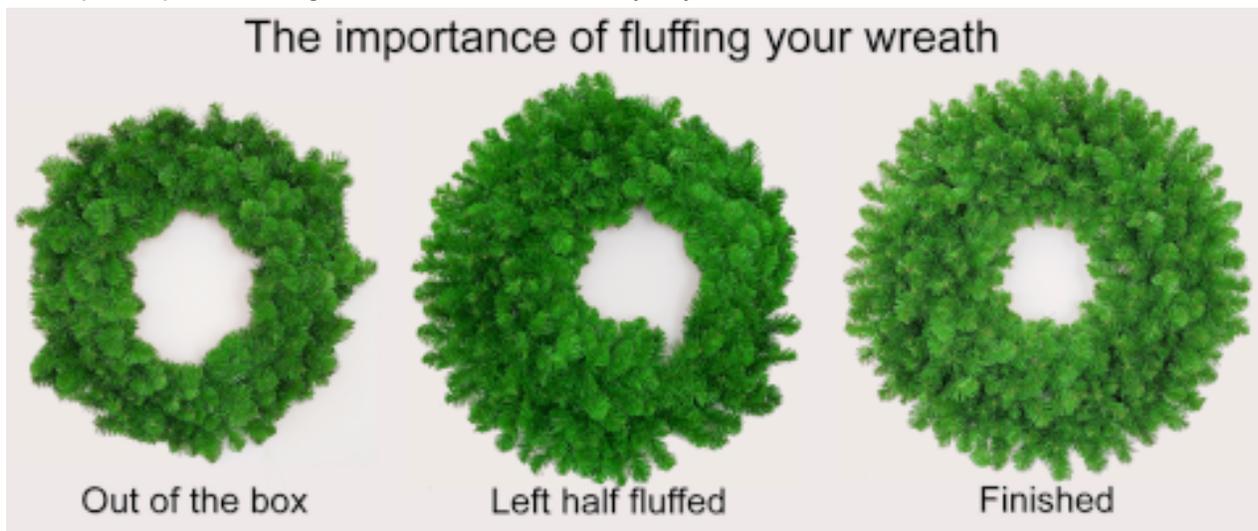

If you have any questions, please call us at 732-449-9427  
We're glad to help!

